

CITATION SUB



OWNER'S MANUAL

harman/kardon
by HARMAN

/ IMPORTANT SAFETY INSTRUCTIONS

Do Not Use Extension Cords

To avoid safety hazards, use only the power cord supplied with this product. We do not recommend that extension cords be used with this product. As with all electrical devices, do not run power cords under rugs or carpets, or place heavy objects on them. Damaged power cords should be replaced immediately by an authorized service center with a cord that meets factory specifications.

Handle the AC Power Cord Gently

When disconnecting the power cord from an AC outlet, always pull the plug; never pull the cord. If you do not intend to use your speaker for any considerable length of time, disconnect the plug from the AC outlet.

Do Not Open the Cabinet

There are no user-serviceable components inside this product. Opening the cabinet may present a shock hazard, and any modification to the product will void your warranty. If water accidentally falls inside this product, disconnect it from the AC power source immediately, and consult an authorized service center.

/ TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS.....	2
INTRODUCTION	4
WHAT' S IN THE BOX	5
PRODUCT OVERVIEW.....	6
GET STARTED.....	8
SPECIFICATIONS.....	11

/ INTRODUCTION

 
This manual includes information on CITATION SUB (subwoofer). We encourage you to take a few minutes to read this manual, which describes the product and includes step-by-step instructions to help you set up and get started. Read and understand all the safety instructions before using your product.

Design and specifications are subject to change without notice.


If you have any questions about the products, their installation or their operation, please contact your Harman Kardon retailer or customer service, or visit us at www.harmankardon.com

/ WHAT'S IN THE BOX

Carefully unpack the box and check if the following parts are included. If any part is damaged, do not use it, contact your Harman Kardon retailer or customer service.

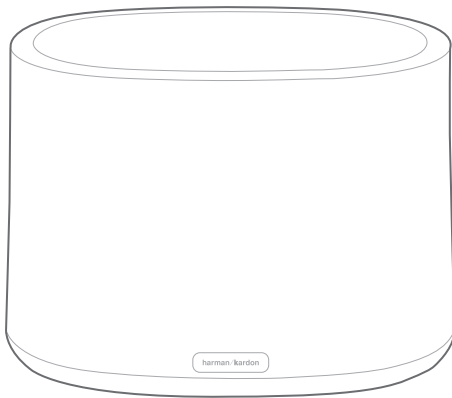

1

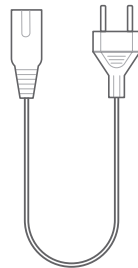 


2

1. Main unit
2. Power cord

PRODUCT OVERVIEW

 Back Panel

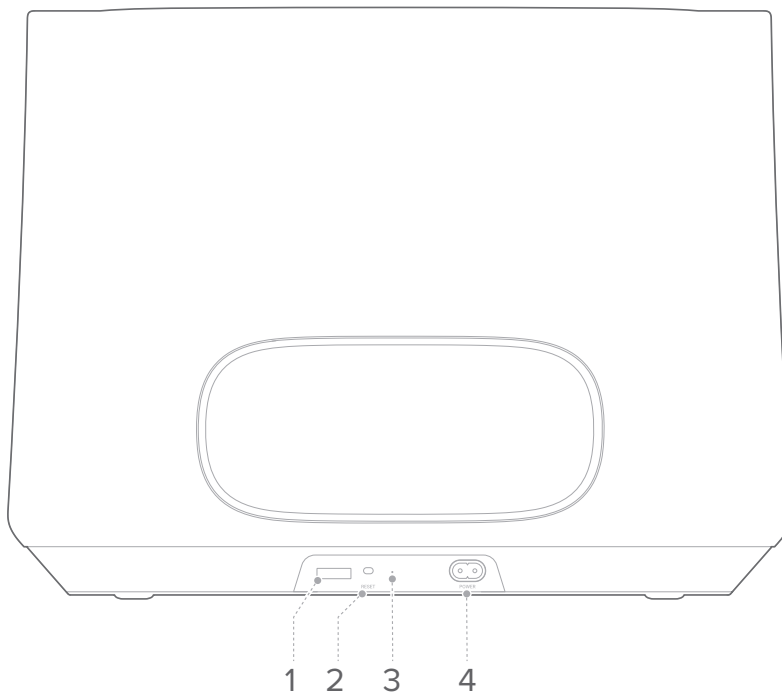

1. SERVICE:

- For service only.

2. RESET:

- Press and hold for 5 seconds to restore the factory settings.

3. LED indicator

4. POWER:

- Connect to the power supply.

LED Indicator

☉	White (Flashing)	Enter into pairing mode
		Out of range / Lost wireless connection
○	White (Constant for 10 seconds and then light off)	Wirelessly connected with CITATION BAR / TOWER)

/ GET STARTED

Placement

Place your CITATION SUB (subwoofer) on any flat and stable surface near an AC (mains) outlet.

 
For a successful connection, keep a maximum distance of 10 meters (33 feet) between the CITATION SUB and your CITATION BAR / TOWER.

Power on your CITATION SUB

NOTES:



- Use the provided power cord only.
- When you disconnect the power cord, always pull the plug, never the cable.

Plug one end of the AC power cord into the **POWER** connector on the back of the subwoofer, then plug the other end to an AC (mains) outlet. The subwoofer will automatically power on.

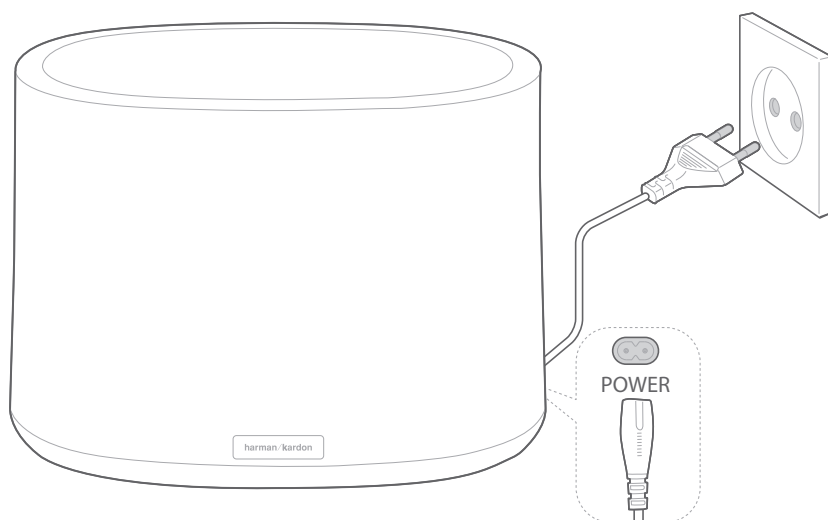


Power on your CITATION BAR / TOWER (sold separately)

  Plug one end of the AC power cord into the **POWER** connector on the back of your CITATION BAR / TOWER, then plug the other end to an AC (mains) outlet.

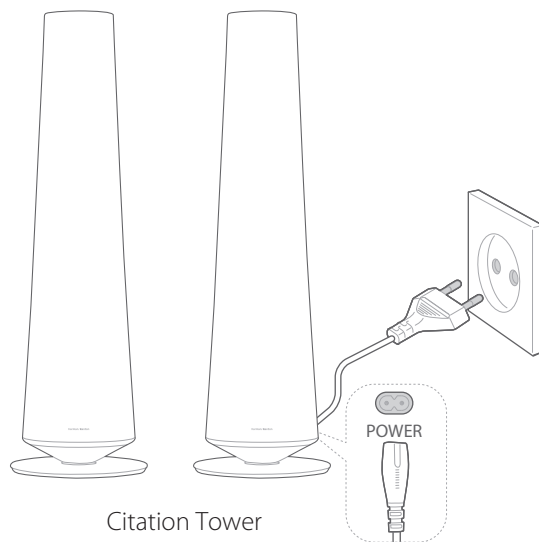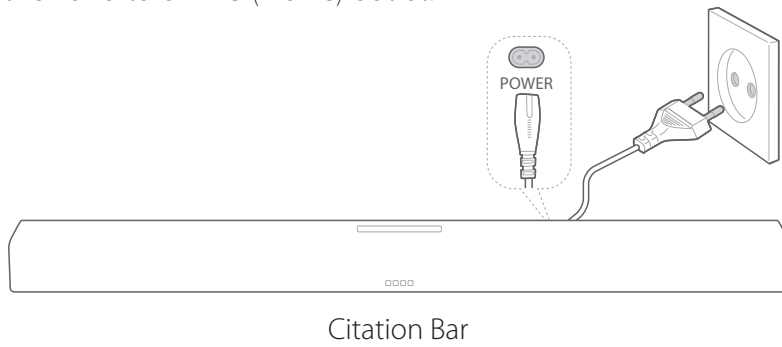

Speaker Setup

 On the touch screen of your CITATION BAR / TOWER, press **“Speaker Setup”** > **“Pairing”** > **“Subwoofer pairing”** and follow the on-screen instructions to complete the setup.

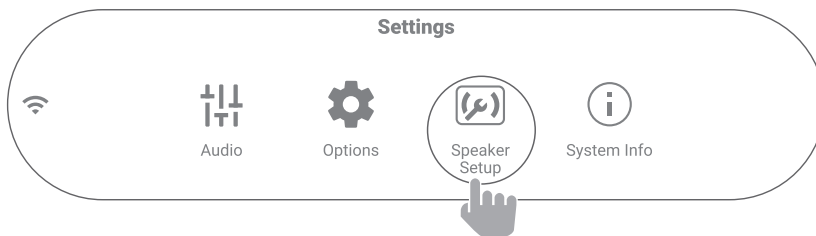

To remove the setup, press **“Subwoofer pairing”** on the touch screen of your CITATION BAR / TOWER again and follow the on-screen instructions.

/ SPECIFICATIONS

- Model Name: Citation Sub
- Transducer: 1 x 10" subwoofer
- Output power: 200W RMS
- Signal-to-noise ratio: >80dB
- Frequency Response: 35-125 Hz
- Power supply: 100-240V~50/60Hz
- Power consumption in sleep mode: < 2.0Watts
- 5G WISA transmitter power: < 14dBm
- 5G WISA modulation: OFDM, BPSK, QPSK, 16QAM
- 5G WISA transmitter frequency range: 5.15-5.35GHz, 5.725-5.825GHz
- Dimension (W x H x D): 448 x 340 x 367 mm
- Weight: 14.72 kg
- Packaging Dimension (W x H x D): 545 x 393 x 434 mm
- Packaging Weight (Gross): 17.59 kg

harman / kardon[®]
by HARMAN